

About this guide

This guide gives the basic information necessary to install a Land System 4 'Landmark' processor. More detailed information is contained in the 'User Guide'. Information regarding the repair of the processor is contained in the 'Service Manual'.

It is important to check the equipment with which you have been supplied to ensure that all ordered items and accessories have been delivered.

Environmental Specification

Ambient temperature limits:	5 to 50°C/40 to 120°F specified 5 to 60°C/40 to 140°F operating
Humidity:	0 to 99%, non-condensing
Vibration:	1G, any axis, 10 to 300Hz
EMC immunity:	EN 50 082-2
EMC emission:	EN 50 081-1
Sealing:	IP65 to front panel (when fitted with protection cover) IP30 to rear panel

These specifications are subject to change without notice.

SYSTEM 4

LANDMARK

GRAPHIC & CLASSIC




Processors

Installation Guide

Land Instruments International
Dronfield S18 1DJ
England
Telephone: (01246) 417691
Facsimile: (01246) 410585
Email: infrared.sales@landinst.com
Internet: www.landinst.com

Land Instruments International
10 Friends Lane
Newtown PA 18940-1804 U.S.A.
Telephone: (215) 504 8000
Facsimile: (215) 504 0879
Email: irsales@landinstruments.net
Internet: www.landinstruments.net

Panel Mounting Information

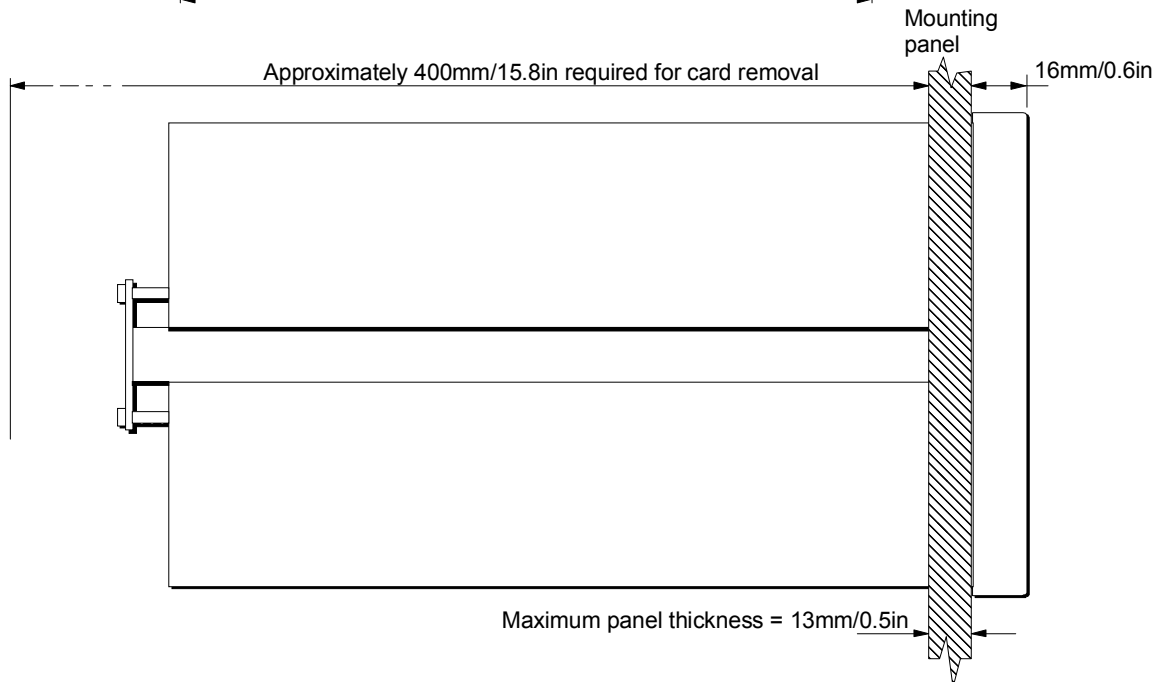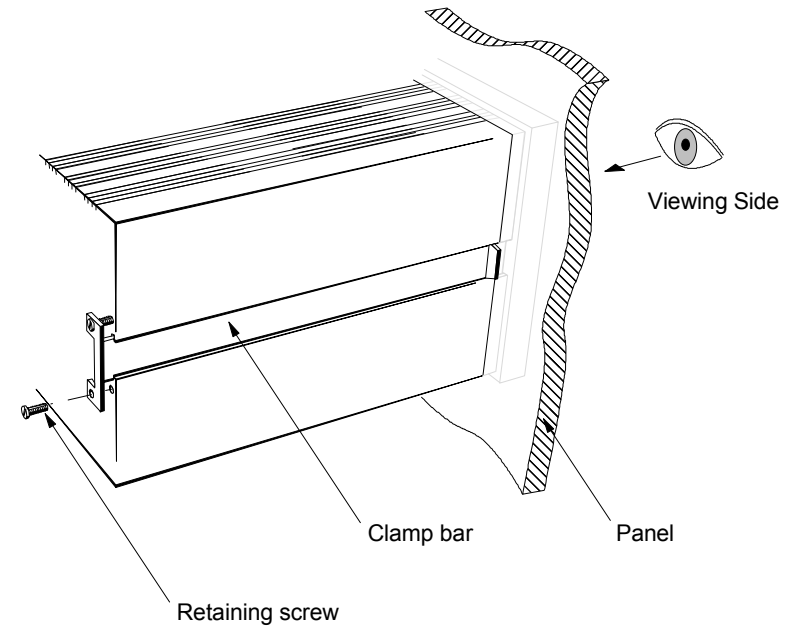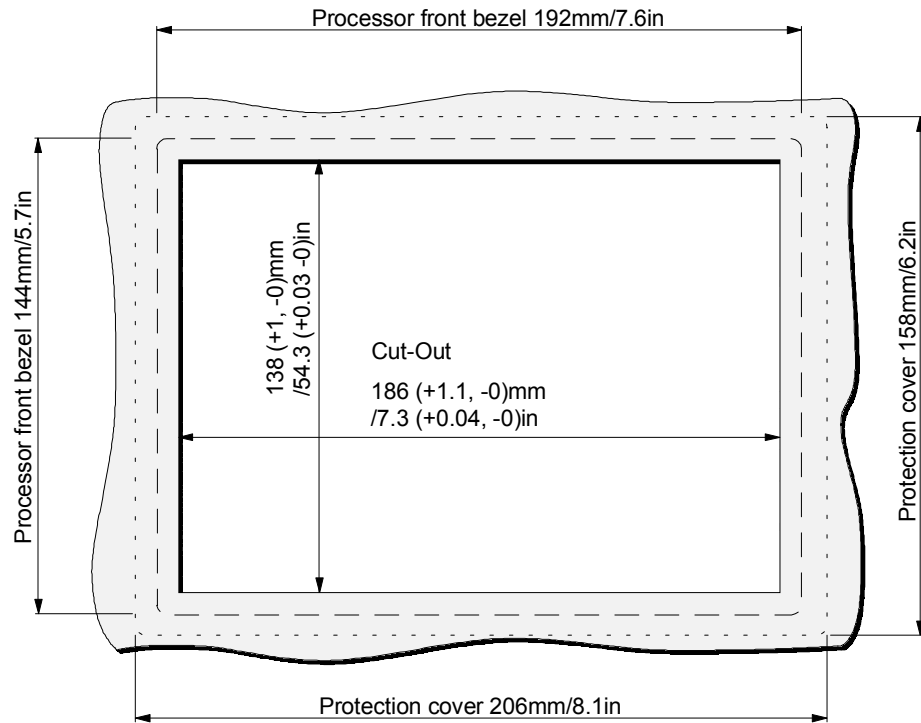

Mounting Instructions

Note

Mounting the processor in a panel is best achieved with two people, one on the viewing side and one at the rear of the mounting panel.

- (i) Unscrew the four retaining screws on the rear of the processors and slide out the two clamp bars.
- (ii) From the viewing side, insert the processor in the mounting panel.
- (iii) From the rear, re-insert the clamp bars into their channels and push them up to touch the mounting panel.
- (iv) Insert and tighten the retaining screws until the mounting panel is firmly gripped between the processor front panel and the clamp bars.

Caution


Do not over-tighten the screws as this will deform the clamp bars.

GRAPHIC Processor

Alarms		
1	C	Alarm 1
2	NO	
3	NC	
4	C	Alarm 2
5	NO	
6	NC	

CMD (Command)	
1	CMD+
2	CMD-

Remote switch or potential-free contacts



Switch/contacts	Peak Picker	Track & Hold
Open circuit	Peak Pick	Track
Short circuit	Reset	Hold


Note
Switch/contacts can be replicated by a dc voltage V_{in} . Where:
>+3.0V = Open circuit
<+1.5V = Short circuit

Output	
1	I+
2	I-
3	Screen
4	V+
5	V-

Thermocouple Transmitter

Pin N°	Function
1	Current Drive
2	Current Return


Channel A
Up to 4 channels can be connected to the processor.
Channels B, C and D have identical pin configurations to Channel A.

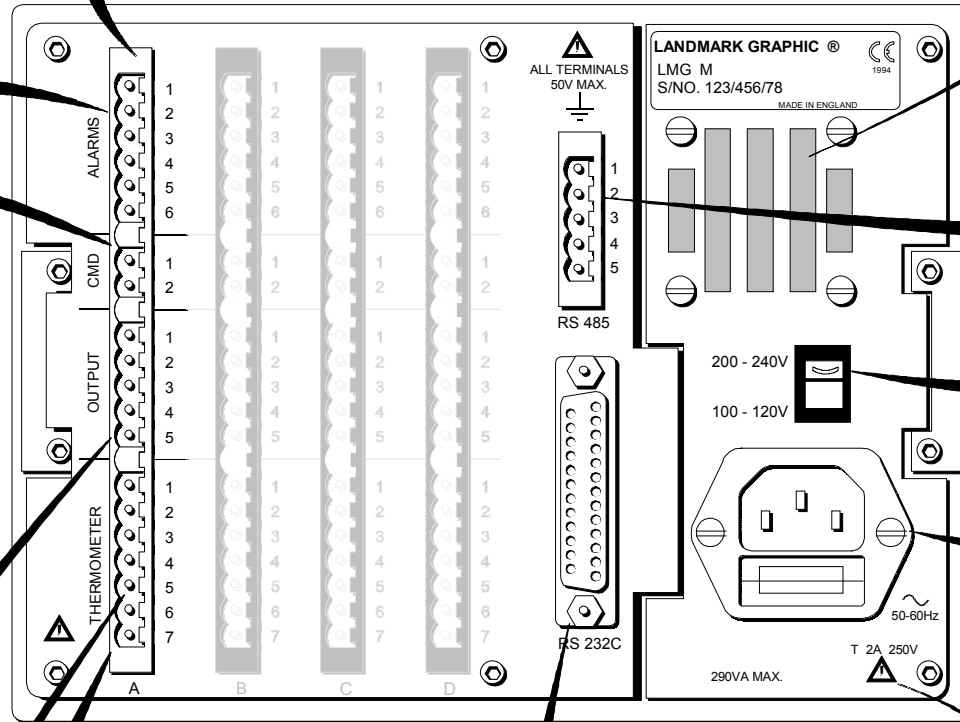

Caution
Keep fan vent clear of obstructions.

RS 485 (optional)	
1	RXD
2	RXD
3	Screen
4	TXD
5	TXD

Supply voltage selector
Set this switch to correspond with the a.c. power supply voltage.

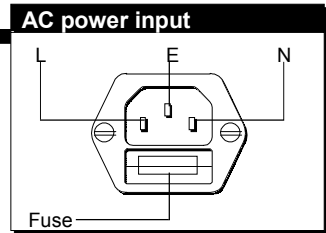


Thermometer		
Pin N°	Cable Colour	Function
1	Yellow	T+
2	Blue	T-
3	White	E+
4	Screen	Screen
5	Red	V+
6	Black	V-
7	Green	E-

RS 232 C (optional)					
1	Screen	10	-	19	-
2	TXD	11	-	20	DTR
3	RXD	12	-	21	-
4	RTS	13	-	22	-
5	CTS	14	-	23	-
6	DSR	15	-	24	-
7	GND	16	-	25	-
8	DCD	17	-		
9	-	18	-		
				- = No connection	

Warning
 Risk of electric shock.
Refer to the processor Service Manual before removing the rear panel screws.
Ensure that the a.c. mains input is disconnected before removing the rear panel of the processor.

CLASSiC Processor

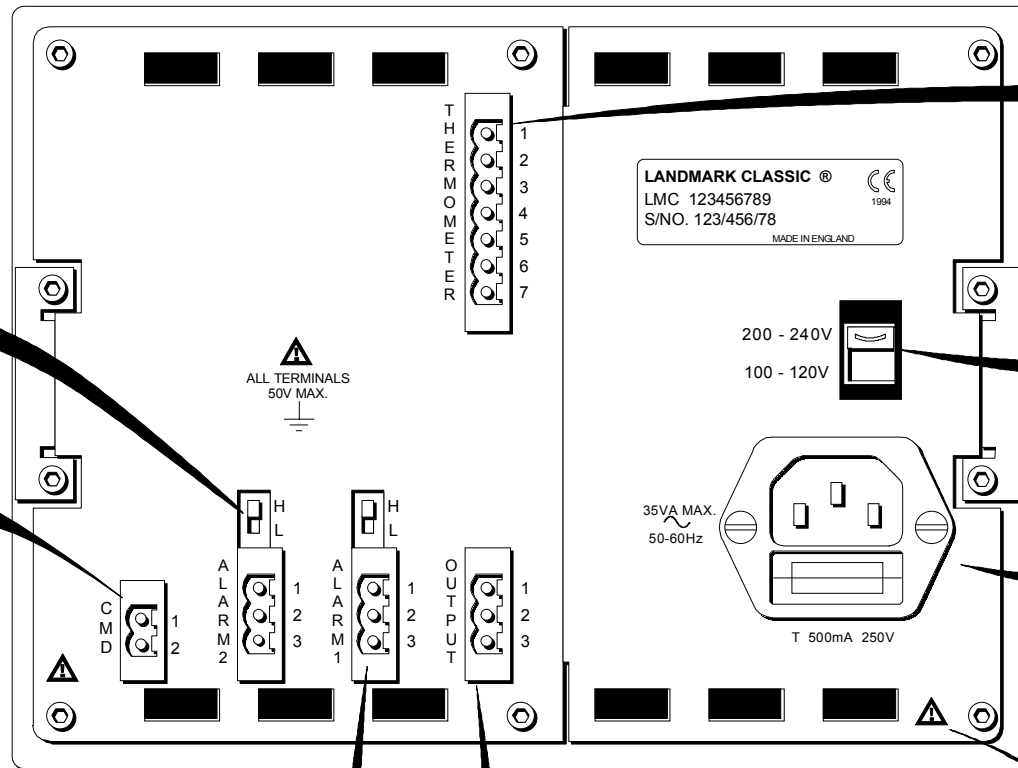


Thermometer		
Pin N°	Cable Colour	Function
1	Yellow	T+
2	Blue	T-
3	White	E+
4	Screen	Screen
5	Red	V+
6	Black	V-
7	Green	E-

High/Low Alarm Selector	
H	High alarm
L	Low alarm

CMD (Command) input	
1	CMD+
2	CMD-

Remote switch or potential-free contacts




Switch/contacts	Peak Picker
Open circuit	Peak Pick
Short circuit	Reset

Note
Switch/contacts can be replicated by a dc voltage Vin. Where:
>+3.0V = Open circuit
<+1.5V = Short circuit

Alarms	
1	C
2	NO
3	NC

Output (4 to 20mA)	
1	I +
2	Screen
3	I -

Supply voltage selector
Set this switch to correspond with the a.c. power supply voltage.

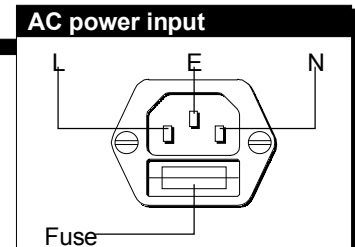

Warning
⚠ Risk of electric shock.
Refer to the processor Service Manual before removing the rear panel screws.
Ensure that the a.c. mains input is disconnected before removing the rear panel of the processor.